

## Attention Owners and Operators

Globe **Chefmate**® equipment is designed to provide safe and productive processing, cooking and warming of food products as long as the equipment is used in accordance with the instructions in this manual and is properly maintained. Unless the operator is adequately trained and supervised there is a possibility of serious injury. Owners of this equipment bear the responsibility to make certain that this equipment is used properly and safely, and to strictly follow all of the instructions contained in this manual and the requirements of local, state or federal law.

Owners should not permit anyone to touch this equipment unless they are over 18 years old, are adequately trained and supervised, and have read and understood this manual. Owners should also ensure that no customers, visitors or other unauthorized personnel come in contact with this equipment. Please remember that Globe cannot anticipate every circumstance or environment in which its equipment will be operated. It is the responsibility of the owner and the operator to remain alert to any hazards posed by the function of this equipment. If you are ever uncertain about a particular task or the proper method of operating this equipment, ask your supervisor.

This manual contains a number of precautions to follow to help promote safe use of this equipment. Throughout the manual you will see additional warnings to help alert you to potential hazards.

If any warning labels or this manual are misplaced, damaged, or illegible, or if you require additional copies, please contact your nearest representative or Globe directly for these items at no charge.

Please remember that this manual or the warning labels do not replace the need to be alert, to properly train and supervise operators, and to use common sense when using this equipment.

## Limited Warranty

Globe Food Equipment Company ("GFE") warrants to the original purchaser of new equipment that said equipment, when installed in accordance with our instructions within North America and subjected to normal use, is free from defects in material or workmanship for a period of 1 year. The labor warranty is one year from original installation or 18 months from actual factory shipment date whichever date occurs first. Unit must be sent prepaid to GFE for repair. No mileage or travel time is paid.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. GFE EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR EXPRESSED OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

GFE'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING EQUIPMENT WHICH PROVES TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE APPLICABLE WARRANTY PERIOD. All repairs pursuant to this Warranty will be performed by GFE Service during normal working hours. IN NO EVENT SHALL GFE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, LOSS OF PROPERTY, PERSONAL INJURY, LOSS OF BUSINESS OR PROFITS OR OTHER ECONOMIC LOSSES, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER IN NEGLIGENCE, WARRANTY, STRICT LIABILITY, OR OTHERWISE.

This warranty is given only to the first purchaser from a retail dealer. No warranty is given to subsequent transferees.

This warranty does not cover product failures caused by: failure to maintain, neglect, abuse, damage due to excess water, fire, normal wear, improper set up and use. Periodic maintenance is not covered.

This warranty is not in force until such time as a properly completed and signed installation/warranty registration or an online registration form has been received by GFE within 30 days from the date of installation. Register online at [www.globeslicers.com/warranty.asp](http://www.globeslicers.com/warranty.asp).

Proof of purchase is required if extended more than 1 year from date of shipment from the factory

THE FOREGOING WARRANTY PROVISIONS ARE A COMPLETE AND EXCLUSIVE STATEMENT BETWEEN THE BUYER AND SELLER. GFE NEITHER ASSUMES NOR AUTHORIZES ANY PERSONS TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SAID EQUIPMENT.

Example of items not covered under warranty, but not limited to just these items:

1. Acts of God, fire, water damage, burglary, accident, theft.
2. Freight damage.
3. Improper installation or alteration of equipment.
4. Use of generic or after market parts.
5. Repairs made by anyone other than a GFE designated servicer.
6. Lubrication.
7. Expendable wear parts, adjustable feet, blown fuses, lamps, etc.
8. Cleaning of equipment.
9. Misuse or abuse.

Register your product at [www.globeslicers.com](http://www.globeslicers.com)



Serial #: \_\_\_\_\_



& NSF 4 Sanitation approved

## Instruction Manual for **Chefmate**® Countertop Food Warming Lamp Model WL2

Visit our website for information on additional products available from Globe.

GLOBE FOOD EQUIPMENT CO.  
2153 DRYDEN RD.  
DAYTON, OH 45439  
PHONE: 937-299-5493  
TOLL FREE: 800-347-5423  
FAX: 937-299-8623

[www.globeslicers.com](http://www.globeslicers.com)

*Slicers, Mixers, Countertop Cooking Equipment, Meat Choppers, & Scales*

### - IMPORTANT SAFETY NOTICE -

This manual contains important safety instructions which must be strictly followed when using this equipment.

© Globe Food Equipment Company, 2011  
Printed 05-2011

## Safety Tips

This manual contains a number of precautions to follow in order to help promote safe use of this equipment.

### ⚠ CAUTION

Warnings affecting your personal safety are indicated by:

### ⚠ WARNING

Warnings related to possible damage to the equipment are indicated by:

To ensure proper and safe operation, the general safety tips below must be followed.

- **DO NOT** disassemble the food warming lamp.
- **ONLY** trained and qualified service personnel should attempt repairs.
- **DO NOT** stack any items, paper or cloth on or near warming lamp.
- **DO NOT** leave lamp on during non-business hours.
- **DO NOT** use this warming lamp outdoors.
- **NEVER** use this lamp to heat anything other than food.
- **NEVER** immerse the warming lamp in water or put into a dishwasher.
- **NEVER** place a plastic tray/plate/container under the food lamp.
- **ALWAYS** use a cooking glove or hot pad when reaching under the warming light.
- **DO NOT** leaving serving utensils under the lamp.
- **DO NOT** touch the warming lamps while in use or directly after use.

**⚠ CAUTION** CAUTION: This equipment gets extremely HOT and can cause serious harm to operators if proper cautionary procedures are not followed.

## Assembly & Installation

1. Remove all components of the warming lamp for quick assembly.
2. Place warming lamp base on a flat surface; add the extension bar to the to the top of the base; aligning the extension bar holes towards the back for easy adjusting later.
3. Next, place the domed lights onto the beveled part of the extension pole.  
NOTE: Domed lights face the same direction as the base feet.
4. Use bolts provided to secure the lamp/lamp height in the back of the extension pole.
5. Remove light bulbs from packaging and carefully screw in a light bulb to each socket.
6. Place the warming lamp on a level surface away from water and at least 8" away from wall or other objects. Also, make sure that warming lamp is not placed under any countertop or overhead cabinet while in use as this may result in fire.
7. With the power On/Off switch in the "Off" position, plug in the warming lamp.

## Operating Instructions

1. Make sure nothing is on or touching the warming lamp and all packing materials have been removed and discarded.
2. Turn the unit on by pressing the On/Off switch "On". The warming lamp will illuminate heating bulbs.

## Storage Instructions

**NOTE:** Warming lamp will NOT cook food. It is intended to keep already cooked food warm for serving.

- **NEVER** move the warming lamp while in use.
- **DO NOT** store warming lamp in a cabinet while plugged in.

Store warming lamp on countertop or in a designated area away from water.

## Cleaning

### ⚠ CAUTION

- **NEVER** place warming lamp in sink or dishwasher.
  - **DO NOT** hose down or pressure wash any part of the warming lamp.
  - **NEVER** attempt to wipe the warming lamp or its bulbs when plugged in and turned on.
1. If the warming lamp is on: power off the warming lamp and let cool for at least 15 minutes. Unplug the lamp from the outlet and gently wipe down lamp stand and bulb holders with a clean, dry or very damp soft cloth.
  2. Let unit dry completely before resuming normal use.

## Maintenance

**⚠ WARNING** **NEVER** attempt to replace heating bulb while the unit is ON.

1. To replace a warming lamp bulb, power off the warming lamp and let cool for at least 15 minutes
2. Unplug the lamp from the outlet.

**⚠ WARNING** Make sure the lamp heads are cool to the touch before approaching the bulb.

3. Gently unscrew the defective bulb from its socket and replace with the correct watt / authorized bulb.

**⚠ WARNING** **DO NOT** attempt to use a regular or unauthorized bulb/part to replace the defective bulb. Failure to comply with this warning may result in electrical shock or fire.

4. Resume normal use.

## Troubleshooting

**DO NOT** attempt any self repairs on this unit. Please contact you local authorized servicer for any repairs.